
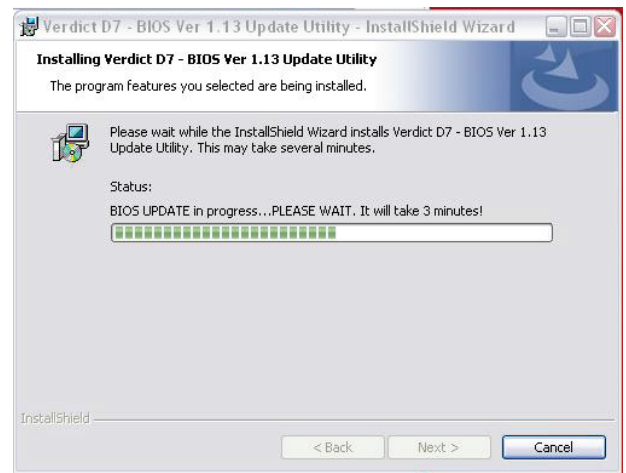


VERDICT D7 BIOS UPDATE REV 1.13 INSTALLATION INSTRUCTIONS


IMPORTANT: BIOS Update 1.13 is for the EEMS324 VERDICT and EEMS326 VERDICT SCAN only. Do not install this update on any other tool.

Do not press any VERDICT keypad buttons during installation.

1. Download the update from diagnostics.snapon.com/VERDICTBIOSUPDATE113
Save the file to a USB memory stick or directly to the VERDICT desktop.
2. Connect an AC power adapter to the VERDICT display tablet and boot up
3. Close the diagnostic suite and all other programs
4. Insert the USB stick in VERDICT (if used). Double-tap the VERDICT D7 BIOS REV 1.13.EXE file
5. An Installshield Wizard will open. Follow the on-screen prompts to perform the installation

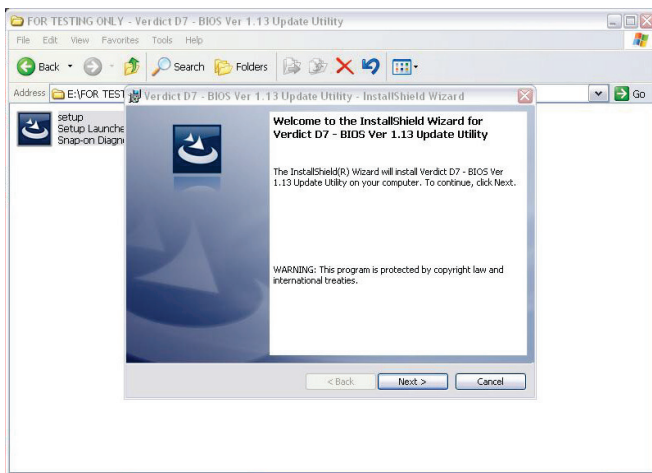

6. When the Wizard is completed, tap "Finish" to close the utility
7. **Remove the USB stick.** Then tap "OK" on the "Restart" dialogue pop up window to reboot the VERDICT to complete the installation process. You must reboot VERDICT to complete the installation.

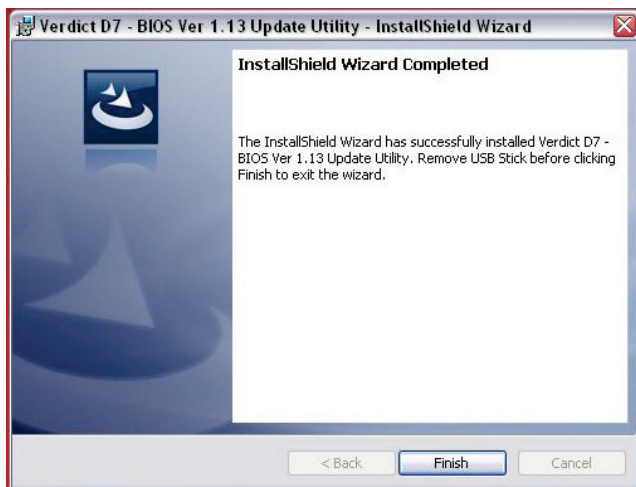

If you need assistance with this procedure or if you have questions, contact Snap-on Diagnostics Customer Care at 1.800.424.7226